


User Guide for 8-way Multipoint License

- 1) First, the firmware version of VC400 video conferencing system should be 30.20.0.1 or higher.


System	
System Model	Yealink VC400
Firmware Version	30.20.0.1
Hardware Version	30.6.6.1.0.0.2
Product ID	201512311622
Uptime	0 Days 19:35

- 2) Next, login VC400 video conferencing system via web user interface, click on **Security** -> **License**.

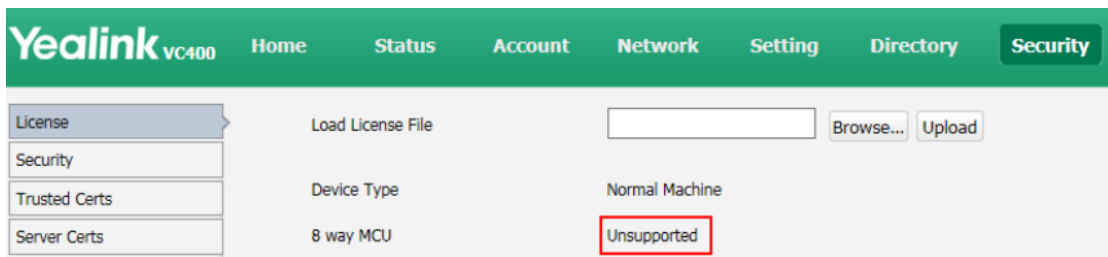

The screenshot shows the Yealink VC400 web interface. The top navigation bar includes Home, Status, Account, Network, Setting, Directory, and Security. The Security menu is expanded, showing License, Security, Trusted Certs, and Server Certs. The License page is active, displaying a 'Load License File' section with a text input field, 'Browse...' and 'Upload' buttons. Below this, the 'Device Type' is set to 'Normal Machine', and the '8 way MCU' status is highlighted as 'Unsupported'.

- 3) Finally, click on **Browse...** and upload the license, the system will reboot automatically.
- 4) After the reboot, check the license status. Now, you can an 8-party conference call.

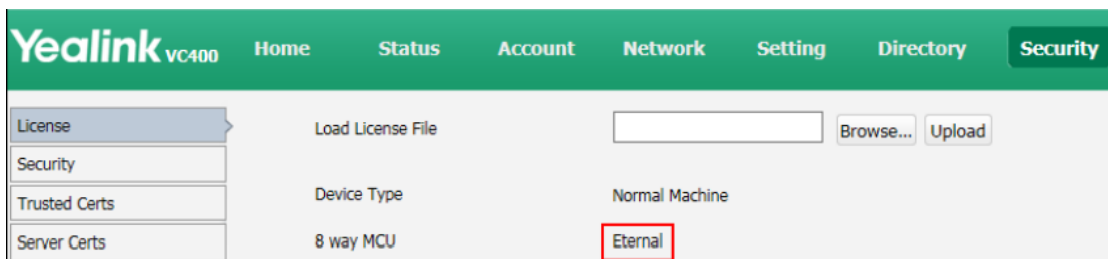

The screenshot shows the Yealink VC400 web interface after a successful license upload. The top navigation bar and Security menu are the same as in the previous screenshot. The License page is active, and the '8 way MCU' status is now highlighted as 'Eternal', indicating that the license is valid for an unlimited duration.